


FINISHED PLAN VIEW
DO NOT SCALE

STEP 1: REMOVE ANCHOR STAND OR STUD IF NECESSARY.

STEP 2: TRIM HEIGHT OF INTERSECTION EPS TO BOTTOM OF FRAME.

STEP 3: FIELD TRIM INCOMING EPS FORMER AS NEEDED.

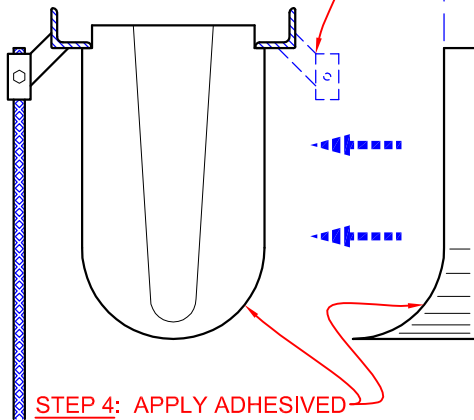

STEP 4: APPLY ADHESIVE TO MATING SURFACES.

STEP 5: TAPE JOINT OF EPS FORMERS AS NEEDED.

ELEVATION
DO NOT SCALE

ECONODRAIN

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURERS SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.

Copyright © 2014 MultiDrain Systems, Inc.



1405 INDUSTRIAL DRIVE
STATESVILLE, NC 28625
(704) 508-1010
1-800-433-1119
www.multidrain.com

EconoDrain[®]
Intersection Filler

FILE NUMBER:

CSI-ED-EIF00

REV: 00

Proprietary rights of MultiDrain Systems, Inc. are included in the information disclosed herein. The recipient, by accepting this document, agrees that neither this document nor the information disclosed herein nor any part thereof shall be copied, reproduced or transferred for manufacturing or for any other purpose except as specifically authorized in writing by MULTIDRAIN.

DISCLAIMER: The customer and the customer's architects, engineers, consultants and other professionals are completely responsible for the selection, installation, and maintenance of any product purchased from MultiDrain, and EXCEPT AS EXPRESSLY PROVIDED IN MULTIDRAIN'S STANDARD WARRANTIES, MULTIDRAIN MAKES NO WARRANTY, EXPRESS OR IMPLIED, AS TO THE SUITABILITY, DESIGN, MERCHANTABILITY, OR FITNESS OF THE PRODUCT FOR CUSTOMER'S APPLICATION. Copies of MultiDrain's standard warranties are available upon request.